Batteriegriff HM

Bedienungsanleitung

Bitte lesen Sie die Bedienungsanleitung sorgfältig durch und bewahren Sie diese zum späteren Nachschlagen auf. Beachten Sie unbedingt die Warn- und Nutzungshinweise.

Nutzungshinweise

- ▲ Nutzen Sie nur Akkus des Typs Lithium-Ionen LP-E6 / E6N im Batteriegriff.
- ▲ Es können maximal drei Akkus gleichzeitig in den Griff eingelegt werden.
- ▲ Verwenden Sie zum Laden der Akkus nur zugelassenes Zubehör.
- ▲ Achten Sie stets darauf, dass Kamera/Batteriegriff ausgeschaltet sind, wenn Sie den Batteriegriff montieren, demontieren oder Akkus tauschen möchten.
- ▲ Ist kein Akku in den Batteriegriff eingelegt, blinkt die LED alle 20 Sek. abwechselnd rot und grün.
- ▲ Werden Akkus eingelegt, bevor der Batteriegriff an der Kamera montiert ist, kann es zu Fehlern in der Leistungsanzeige kommen.
- ▲ Entfernen Sie die Akkus aus dem Batteriegriff bei längerer Nichtnutzung und entfernen Sie den Batteriegriff von der Kamera.

A Produktübersicht

A

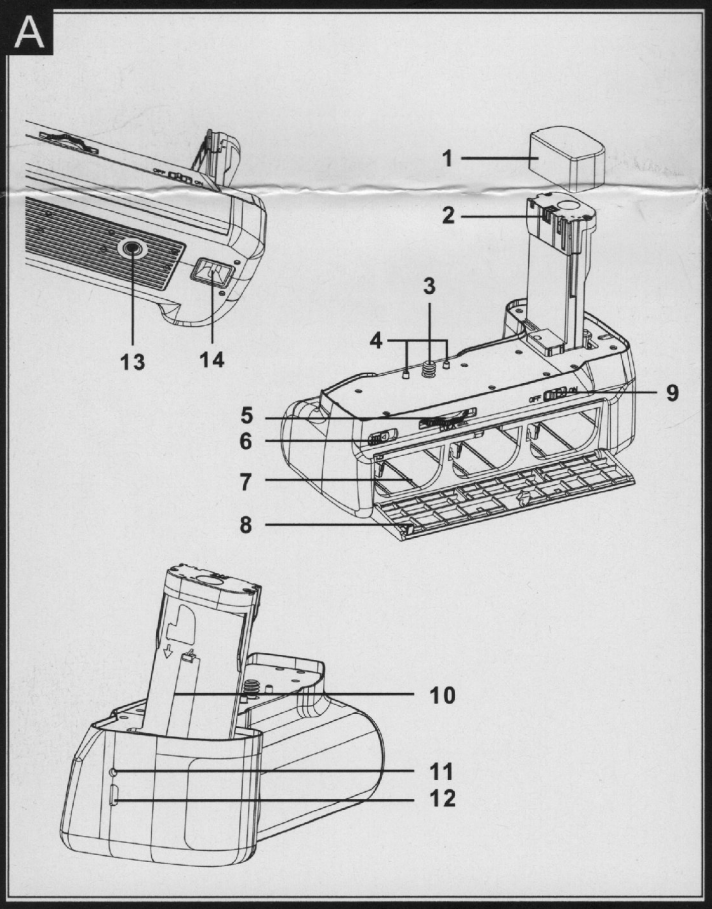

1. Schutzkappe
2. Elektrische Kontakte
3. Befestigungsschraube
4. Führungsstifte
5. Befestigungsrad
6. Akkufachentriegelung
7. Akkufächer 1-3
8. Akkufachdeckel
9. EIN / AUS-Schalter
10. Halterung für Akkufachdeckel der Kamera
11. Ladeanzeige
12. Ladeanschluss
13. Stativgewinde (TYP C USB)
14. Halterung für Handschlaufe

B

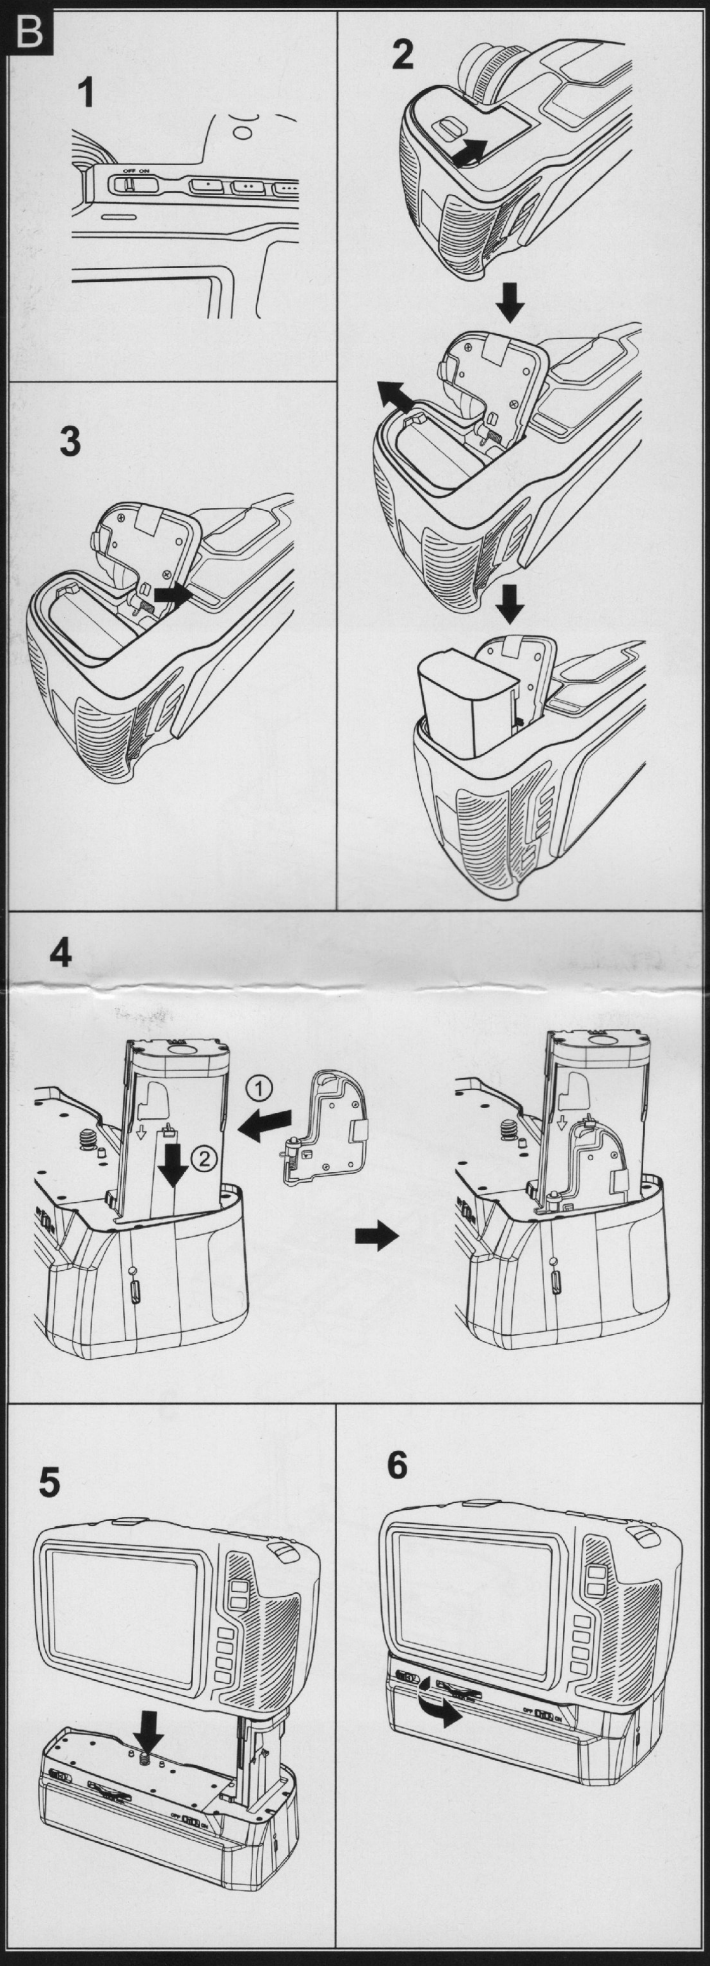

B Batteriegriff an die Kamera montieren

1. Schieben Sie den Ein-/Ausschalter der Kamera in die Position "Aus" (Abb. B-1).
2. Öffnen Sie den Akkufachdeckel und entnehmen Sie den Akku aus der Kamera (Abb. B-2).
3. Drücken Sie den Knopf zur Entfernung des Akkufachdeckels an der Kamera und nehmen Sie den Akkufachdeckel ab (Abb. B-3).
4. Befestigen Sie den Akkufachdeckel der Kamera an der dafür vorgesehenen Akkufachdeckelhalterung am Batteriegriff. Sie hören ein Klicken, wenn der Akkufachdeckel einrastet (Abb. B-4).
5. Schieben Sie den Kontaktarm des Batteriegriffs in das Akkufach der Kamera. Achten Sie darauf, die Befestigungsschraube und die Führungsstifte am Batteriegriff genau am Stativgewinde der Kamera auszurichten. Fixieren Sie dann Kamera und Batteriegriff mit dem Befestigungsrad (Abb. B-5/6).

C Akkus in den Batteriegriff einlegen

1. Öffnen Sie den Akkufachdeckel am Batteriegriff (Abb. C-1).
2. Legen Sie 1-3 Akkus in die Akkufächer im Batteriegriff ein. Nutzen Sie nur die kompatiblen Akkus LP-E6/E6N (Abb. C-2).
3. Schließen Sie den Akkufachdeckel. Er ist sicher verschlossen, wenn er einrastet (Abb. C-3).

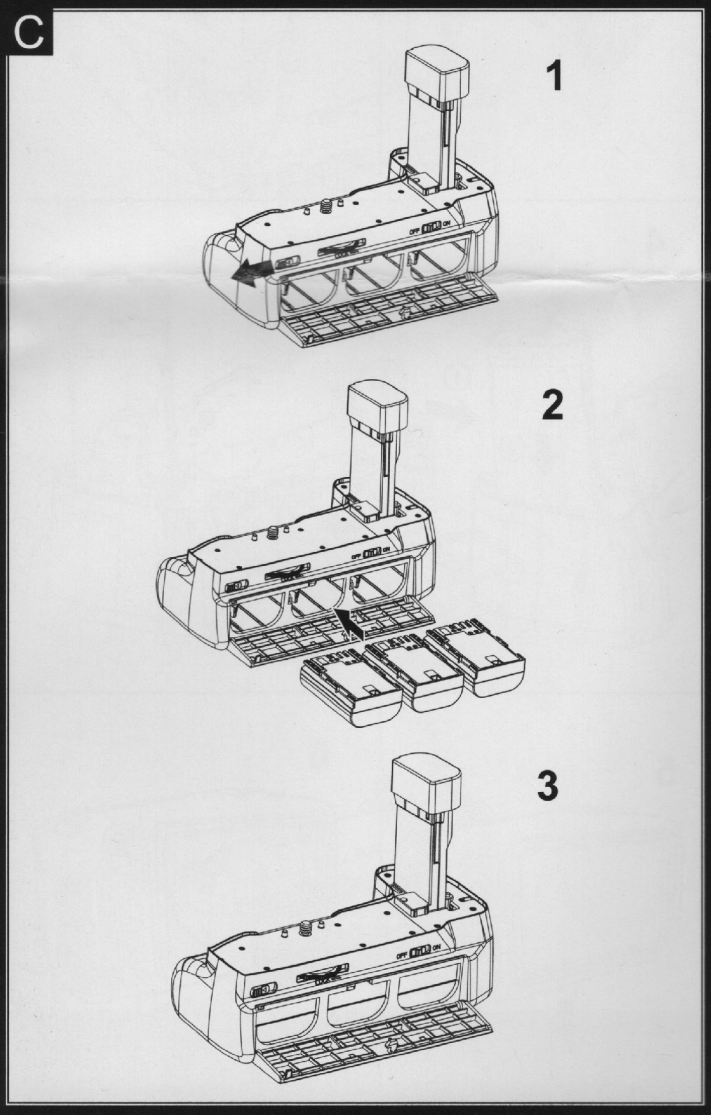

D Ladefunktion

Sie können Akkus im Batteriegriff mit Hilfe des USB-C Adapters aufladen.

Wichtig: Beim Ladevorgang darf der Batteriegriff nicht mit der Kamera verbunden sein, da es sonst zu Beschädigungen an der Kamera kommen kann!

1. Demontieren Sie den Batteriegriff von der Kamera, wenn noch nicht geschehen.
2. Sind keine Akkus eingelegt, öffnen Sie den Akkufachdeckel am Batteriegriff und legen Sie 1-3 Akkus vom Typ LP-E6/E6N in den Batteriegriff ein. Schließen Sie den Akkufachdeckel.
3. Schließen Sie den USB-C Adapter an das 220V Netzteil an und verbinden Sie den Batteriegriff mit dem Netzteil und einer geeigneten Stromquelle.
4. Leuchten die LED rot, werden die Akkus geladen. Wenn die Akkus geladen sind, leuchtet die LED grün. Bitte entfernen Sie das Netzteil, wenn die Akkus geladen sind.

E Technische Spezifikationen

Modell:	HM
Akkus:	1-3 Akkus LP-E6/E6N
Kompatibilität:	Blackmagic 4K/6K
Arbeitstemperatur:	0-40 °C
Ladezeit:	2-6 Stunden (1-3 Akkus)
Gewicht:	227g
Ladestrom:	5V 2.4A

F Warnungen

Halten Sie sich unbedingt an die Warnungen und Hinweise. Es kann sonst zu Stromschlägen, Kurzschluss, Brand und Gefahr für Leib und Leben kommen.

▲ Schützen Sie den Batteriegriff und das Zubehör vor Feuchtigkeit.
▲ Halten Sie den Batteriegriff großer Hitze (Feuer, Heizung, direkte Sonneneinstrahlung usw.) fern.
▲ Schützen Sie die Akkukontakte bei Nichtnutzung vor Kurzschluss. Kleben Sie die Kontakte beispielsweise mit einem Klebeband ab.
▲ Entfernen Sie umgehend die Akkus und nutzen Sie den Batteriegriff nicht weiter, wenn Sie Risse, Brüche, Verformungen am Batteriegriff oder dessen Zubehör sehen, oder wenn Sie eigenartige Gerüche, starke Hitze oder Rauch wahrnehmen.
▲ Dieser Batteriegriff und sein Zubehör ist nicht für Kinder geeignet.
▲ Versuchen Sie nicht, den Batteriegriff zu zerlegen und/oder zu reparieren.
▲ Bei nicht sachgemäßer Nutzung erlischt die Gewährleistung.

PATONA International S.L.U.
Untere Giesswiesen 17, 78247 Hilzingen, Germany

Made in China

PATONA PREMIUM SERIES

Battery Grip HM

Manual

Please read the manual carefully and keep them for future reference. Follow the warnings and instructions for use.

Instructions for use

- ▲ The battery grip works only with LP-E6 / E6N lithium-ion batteries.
- ▲ You can insert up to three batteries into the battery grip.
- ▲ Use only approved accessories to charge the batteries.
- ▲ Always ensure that the camera / battery grip is switch "OFF" when you want to attach / detach the battery grip.
- ▲ If no battery is inserted in the battery grip, the LED flashes red and green every 20 seconds.
- ▲ If batteries are inserted before the battery handle is attached to the camera, errors in the performance display may occur.
- ▲ Remove the batteries from the battery grip when not in use for a longer time. Remove the battery grip from the camera.

A Product overview

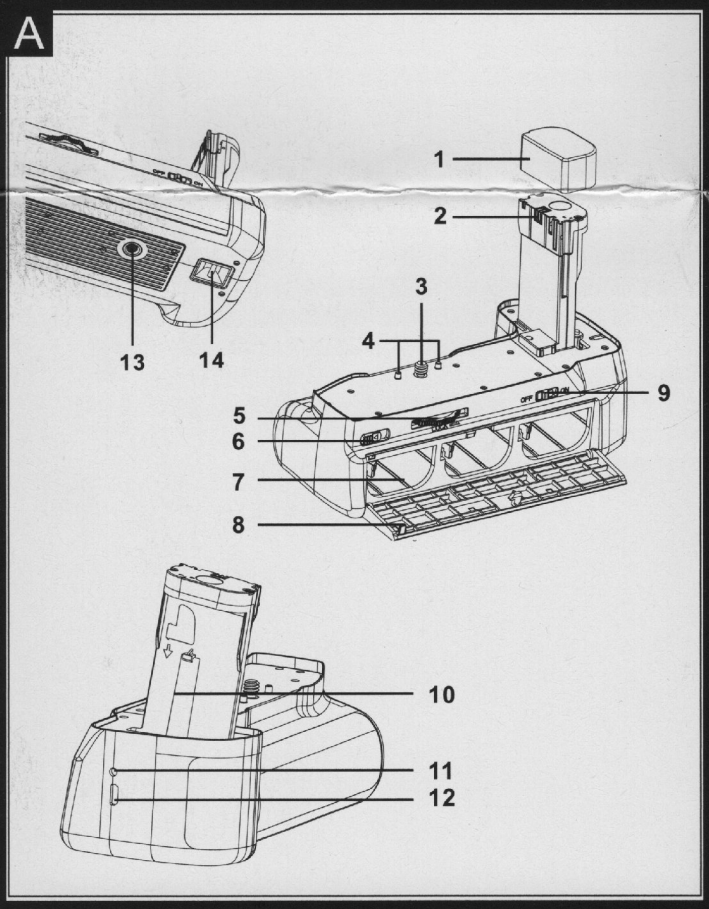

1. Protective cap
2. Electrical contacts
3. Fixing screw
4. Guide pins
5. Fixing wheel
6. Battery compartment lever
7. Battery compartments 1-3
8. Battery compartment cover
9. ON / OFF switch
10. Holder for battery cover of the camera
11. Charging indicator
12. Charging connection
13. Tripod socket (+TYPE C USB)
14. Hand strap attachment

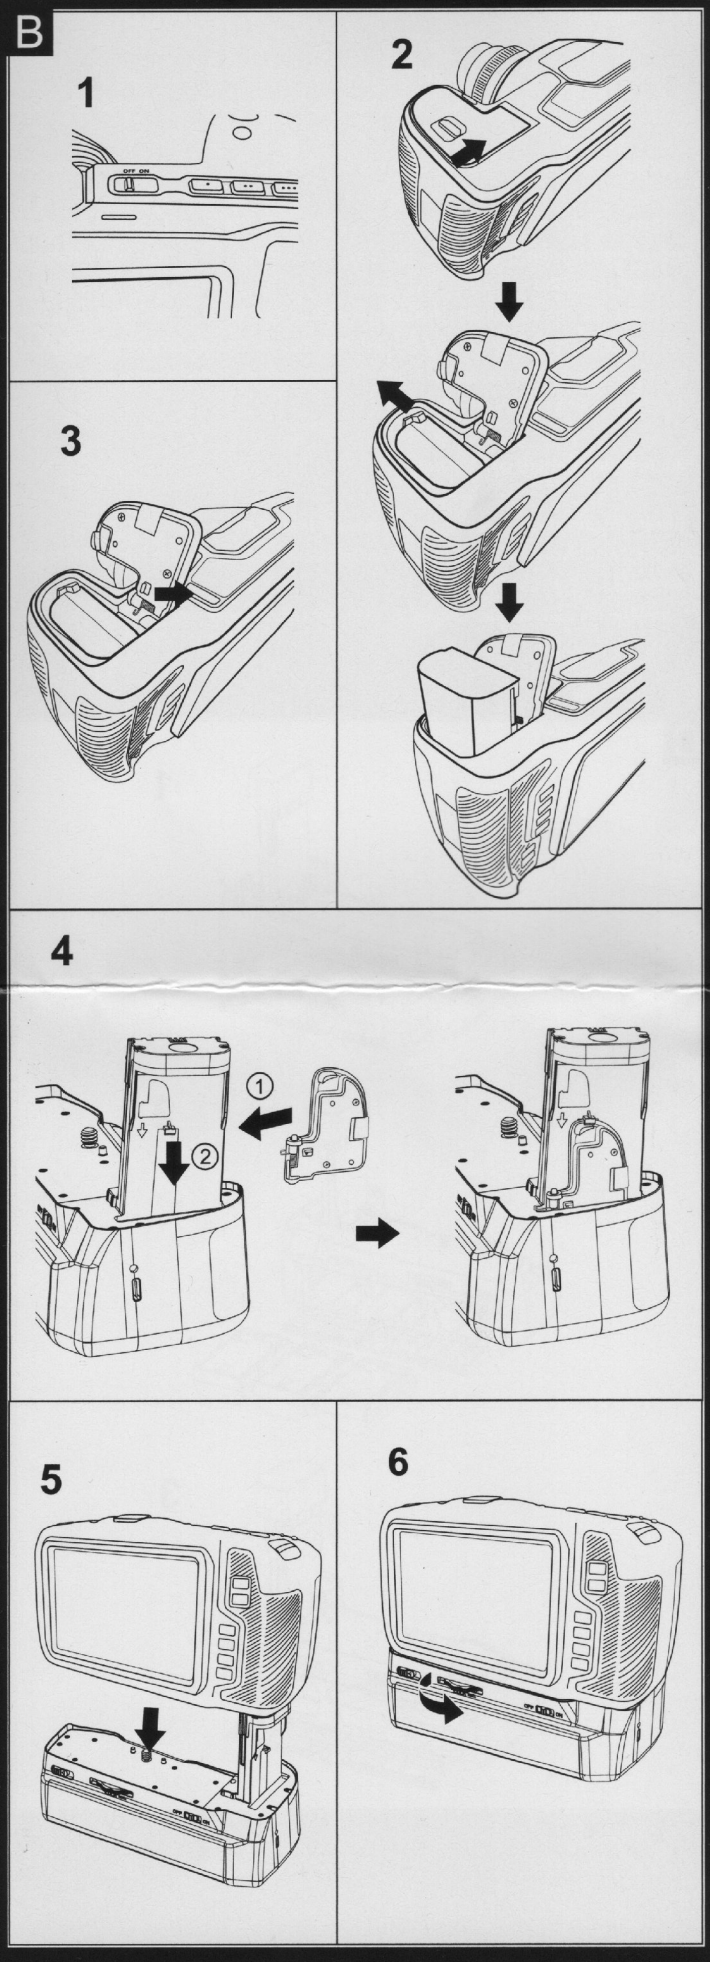

B Attach the battery grip to the camera

1. Switch the camera power to "OFF" (Fig. B-1).
2. Open the battery compartment cover and remove the battery from the camera (Fig. B-2).
3. Push the button to remove the battery compartment cover and remove the compartment cover from the camera (Fig. B-3).
4. Attach the camera compartment cover at the camera compartment cover holder of the battery grip. You will hear a click if the cover snaps into place (Fig. B-4).
5. Slide the contact arm of the battery grip in the battery compartment of the camera. Make sure that the fixing screw and the guide pins on the battery grip are exactly on the tripod socket of the camera. Then fix the camera and battery grip with the fixing wheel (Fig. B-5, B-6).

C Insert batteries

1. Open the battery compartment cover of the battery grip (Fig. C-1).
2. Insert 1-3 batteries in the battery compartments. Use only LP-E6 / E6N (Fig. C-2).
3. Close the battery cover. It is securely locked when it snaps into place (Fig. C-3).

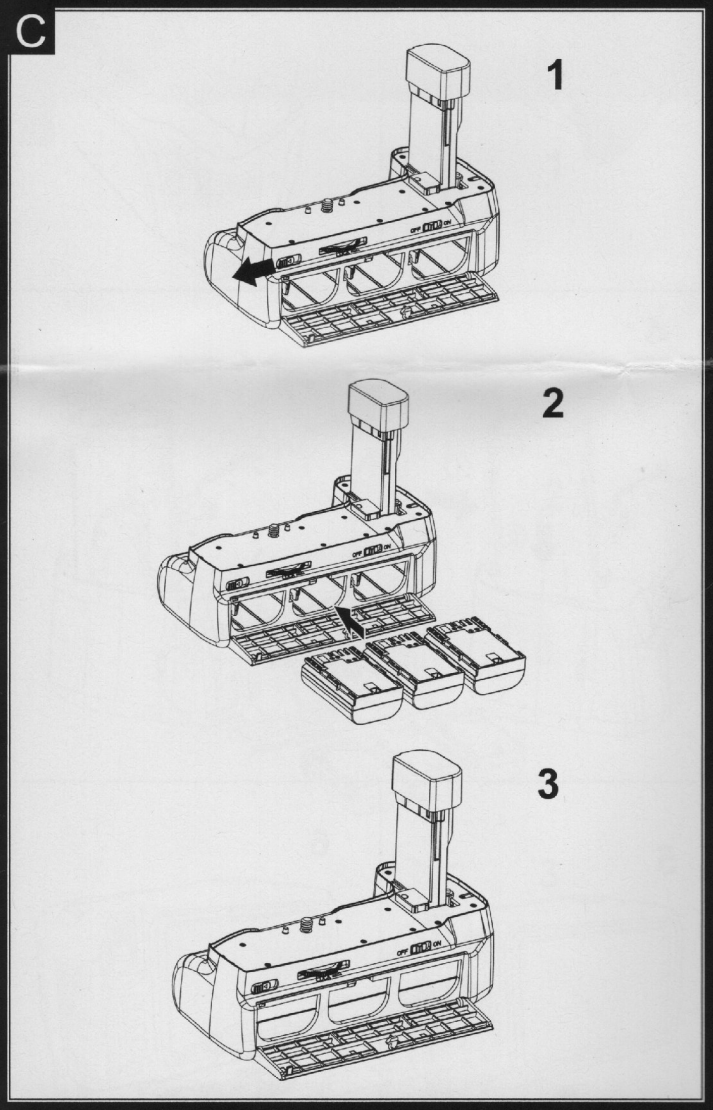

D Charging

You can charge batteries in the battery handle using the USB-C adapter.

Important: The battery grip must not be connected to the camera during charging the batteries, otherwise the camera may be damaged!

1. Remove the battery grip from the camera if you have not already done.
2. If no batteries are inserted, open the battery compartment cover and insert 1-3 LP-E6 / E6N batteries. Close the battery compartment cover.
3. Connect the USB-C adapter to the 220V power supply and connect the power supply to a suitable power source.
4. If the LED lights up red, the batteries charging. If the batteries charged, the LED lights up green. Please remove the power adapter when the batteries are charged.

E Technical specifications

Model:	HM
Batteries:	1-3 batteries LP-E6 / E6N
Compatibility:	Blackmagic 4K / 6K
Working temperature:	0-40 °C.
Charging time:	2-6 hours (1-3 batteries)
Weight:	227 g
Charging current:	5V 2.4 A.

F Warnings

Please note the warnings and notes. Otherwise, defects, electric shocks, short circuits, fire and danger to life and limb can occur.

▲ Protect the battery grip and accessories from moisture.
▲ Keep the battery grip away from excessive heat (fire, heating, direct sunlight ..).
▲ Protect the battery contacts against short-circuit when not in use. Insulate the contacts with an adhesive tape, for example.
▲ Immediately remove the batteries and stop using the battery grip if you see breaks, deformations on the battery grip or its accessories, or if you notice strange smells, excessive heat or smoke.
▲ This battery grip and its accessories are not suitable for children.
▲ Do not attempt to disassemble and / or repair the battery grip.
▲ The warranty expires if the device is not used properly.

PATONA International S.L.U.
Untere Giesswiesen 17, 78247 Hilzingen, Germany

Made in China